

## INSTALLATION INSTRUCTIONS FOR MODEL EZT 107 3/4" SIDE INLET EZ TRAP® (NO SWITCH)

1. Screw drainpan adaptor into 3/4" primary drain outlet on A Coil. Cut PVC pipe stub (not included in kit) to required length ( 3" recommended) and glue into adaptor with PVC adhesive.
2. Attach one of the uncapped legs of the cross to this stub with the cross in a horizontal plane so that the other uncapped leg faces to the side where you want the trap to be. Cross must be level.
3. Determine how far you want the trap to be off the side of the furnace, cut a second PVC stub to length required and glue into the open leg of the cross.
4. Mount center leg of inlet tee onto open end of PVC pipe stub with PVC adhesive, ensuring that capped end (cleaning port) faces up and open (3/4") end faces down and that tee is plumb.
5. Apply PVC adhesive to **longer end** of clear PVC U bend and insert into the open bottom of the tee. U bend can be rotated around the axis of the tee bottom to enable it to be installed in a restricted space, if necessary.  
**NOTE: LONG END OF U BEND MUST BE FIXED TO THIS TEE TO ENSURE PROPER OPERATION OF TRAP.**
6. Apply PVC adhesive to the other end of the U bend and fit outlet tee so that the black stub faces up. This tee can also be rotated around its own axis if space restrictions require.
7. Run condensate line from center leg of outlet tee to the outside of the building or to the drain line vent if local codes permit this.
8. Test the condensate line by removing the red cleaning cap from the top of the inlet tee and pouring water down the orifice to see that it runs out through condensate line.
9. Replace red cap on top of inlet tee and seat firmly. **NOTE THAT ALL 3 CAPS ARE REMOVEABLE FOR CLEANING AND TESTING PURPOSES ONLY. REPLACEMENT OF THESE CAPS IS ESSENTIAL FOR THE CORRECT OPERATION OF THE TRAP AND THEY MUST REMAIN FITTED DURING NORMAL OPERATION.**
10. Insert handle of cleaning brush through the retaining hole on the stub on top of the outlet tee to store when not in use and prevent brush from getting separated from trap.

### INSTALLER NOTE

1. THIS EZ TRAP® MUST BE INSTALLED STRICTLY IN ACCORDANCE WITH MANUFACTURERS' INSTRUCTIONS TO ENSURE PROPER OPERATION AND IN ACCORDANCE WITH ALL APPLICABLE LOCAL PLUMBING AND/OR DRAINAGE CODES.
2. THIS EZ TRAP® IS SUITABLE FOR USE ONLY WITH DRAIN PANS WITH OUTLET OF UP TO 3/4" . **DO NOT USE ON LARGER SIZES** AS IT MAY NOT BE ABLE TO HANDLE THE CONDENSATE PRODUCED BY LARGER TONNAGE UNITS. CONSULT FACTORY FOR DETAILS ON LARGER TRAPS IF REQUIRED.

### CLEANING INSTRUCTIONS FOR MODEL 107 EZ TRAP®

1. Remove red cap from top of trap inlet tee.
2. Remove brush from retainer hole, insert into opening on top of inlet fitting and push downwards through trap to clear blockage.
3. Remove red cap from horizontal cleaning port facing directly into A Coil, insert brush through cross to clean drain pan outlet of A Coil and replace cap tightly.
4. Remove second red cap on side of cross, Insert brush horizontally through cross to clean stub connection to trap, replace cap tightly.
5. Replace brush in retainer hole on stub of outlet tee.
6. **NOTE: THE 2 CAPS ON THE HORIZONTAL CROSS ARE CRITICAL FOR CORRECT OPERATION OF TRAP. MUST BE WATERTIGHT AND MUST REMAIN FITTED DURING NORMAL OPERATION. DO NOT TEST CONDENSATE LINE FOR CORRECT OPERATION BEFORE REPLACING THESE CAPS.**
7. Pour water into top of trap inlet tee to test that drain line is clear.
8. Replace red cap on top of inlet tee. **THIS CAP IS REMOVEABLE ONLY FOR CLEANING AND TESTING PURPOSES, IS ESSENTIAL FOR CORRECT OPERATION OF TRAP AND MUST REMAIN FITTED DURING NORMAL OPERATION.**

### E Z TRAP WARRANTY

The EZ Trap condensate trap or overflow switch purchased by you is unconditionally warranted to be free from defects in material and workmanship under normal use for a period of three (3) years from date of purchase, providing it is installed and operated strictly in accordance with manufacturers' installation instructions.

If the product is found to be defective or otherwise fails in normal use, you may return it for replacement. All freight charges for the return of the product shall be borne by you. The manufacturer will pay outgoing freight charges for the replacement product.

Defective products returned to EZ Trap prepaid will be repaired or replaced free of charge. Replacement product will, to the extent such product is then available in manufacturers inventory, be of similar type, color and kind. Manufacturer retains the right to substitute product if replacement product does not conform in terms of color, type and specifications to the original product if no longer available.

This warranty does not cover replacement labor or any cost, claim or incident to any defect nor does it cover any consequential damages. The sole liability of the manufacturer under this warranty is limited to the replacement of defective product. Product damaged by improper use, accident, neglect, alternation,